
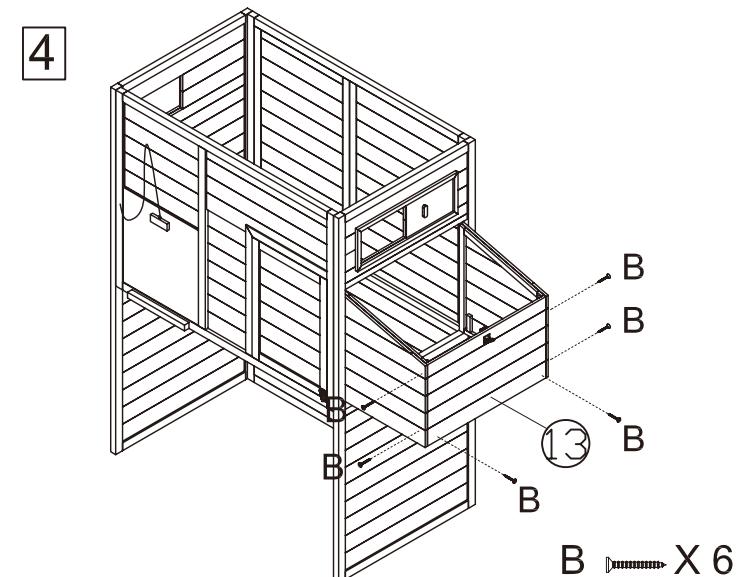
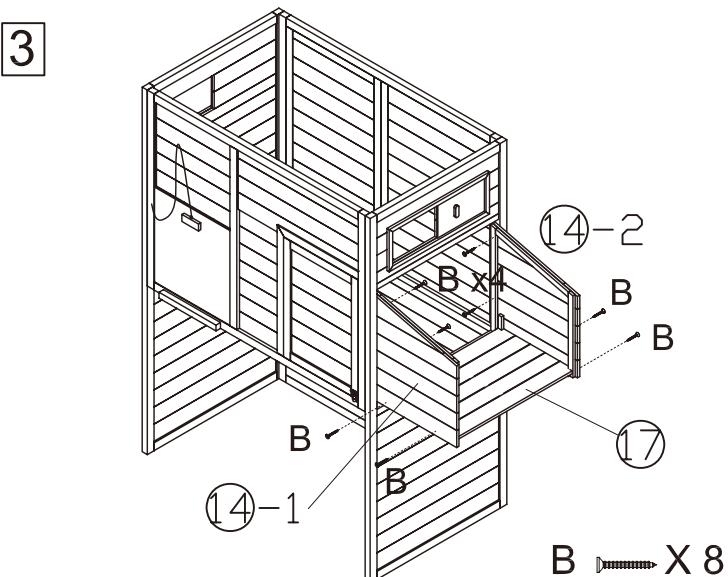
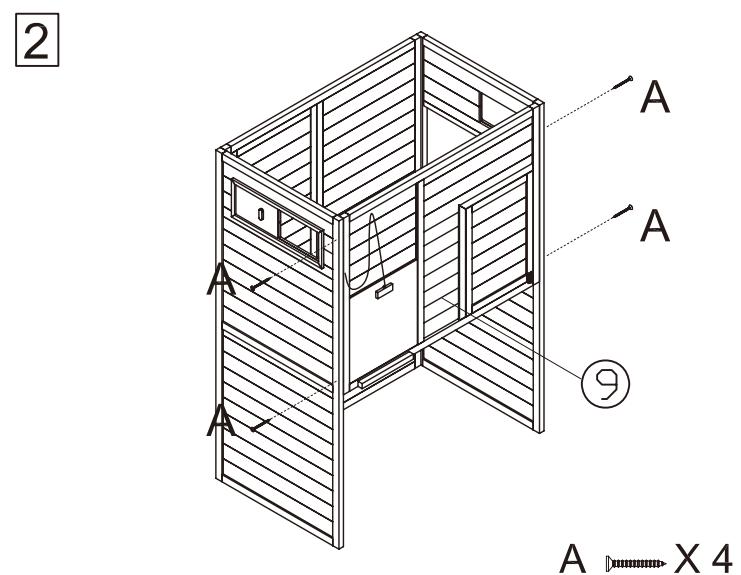
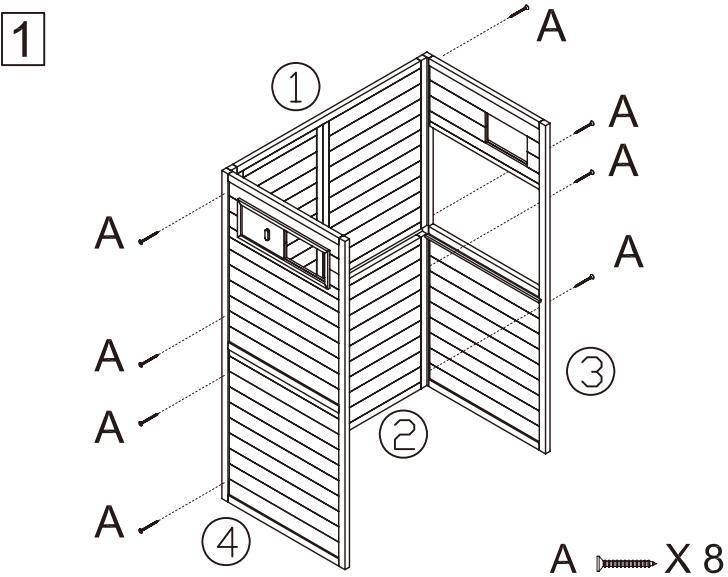
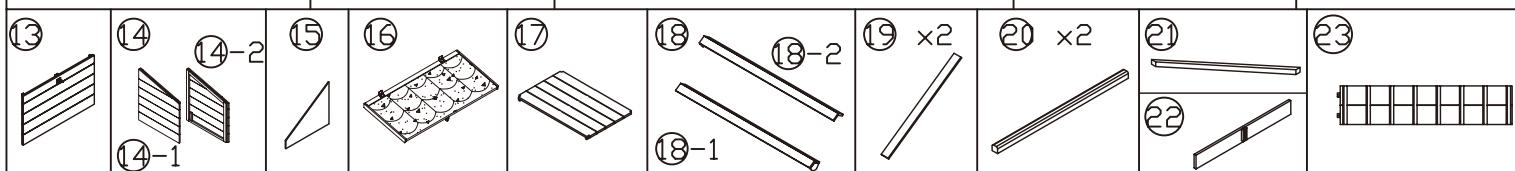
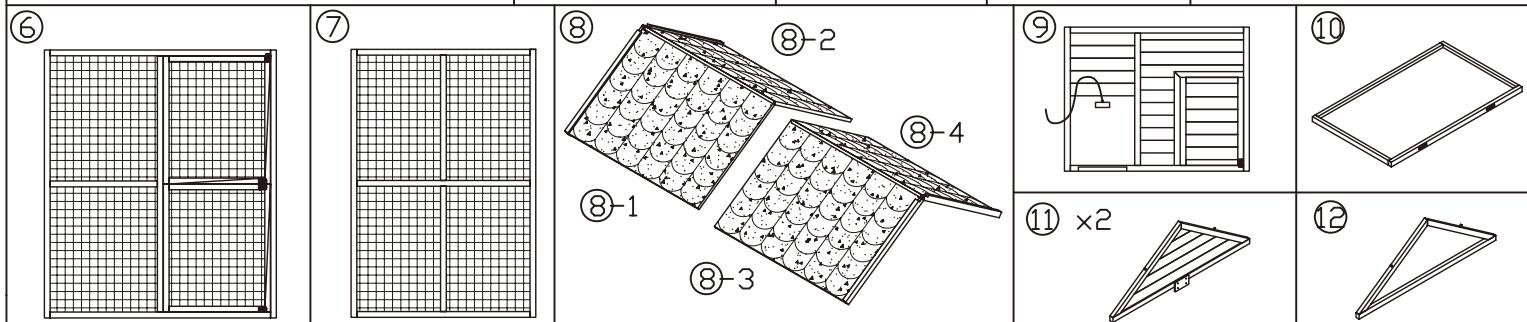


**Assembly Instruction**

A	SCREWS	3.5*50	24PCS
B	SCREWS	3.5*35	16PCS
C	SCREWS	3.5*30	16PCS
D	SCREWS	3.5*25	26PCS
E	SCREWS	3.0*16	6PCS
F	O-	2PCS	

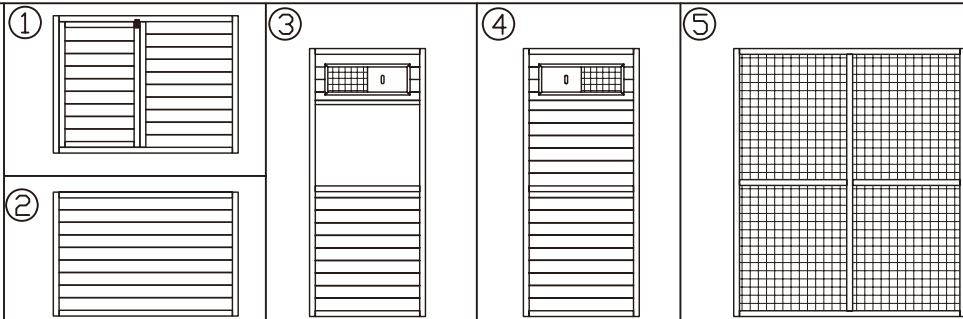


**ADVANTEK**

Item #21933-The Town House


# Assembly Instruction

P2

5

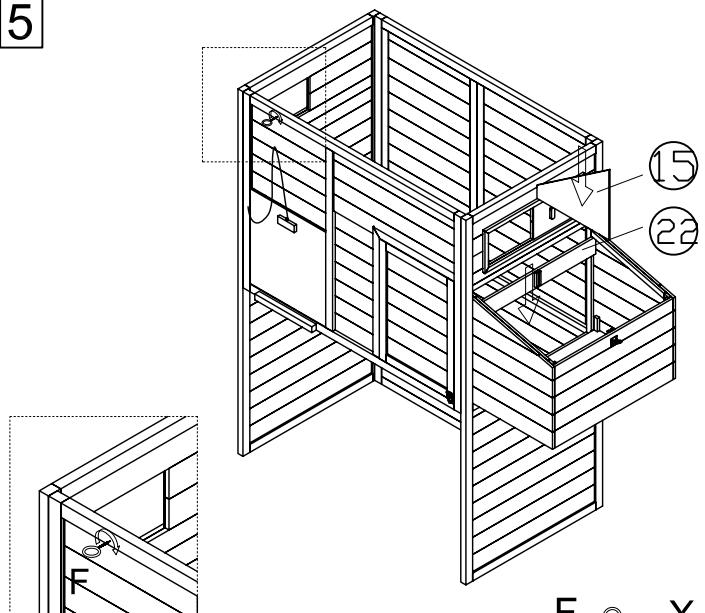


6

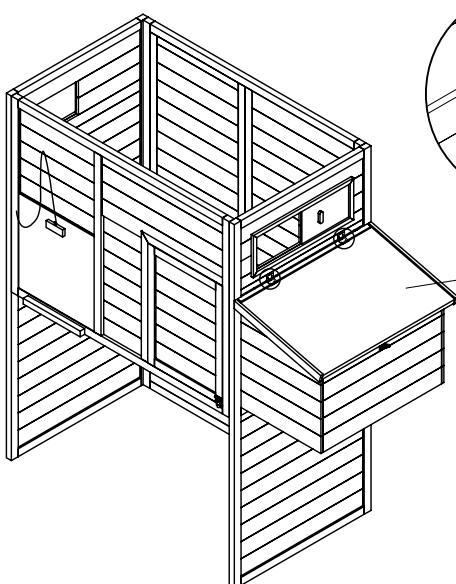


E X 4

7

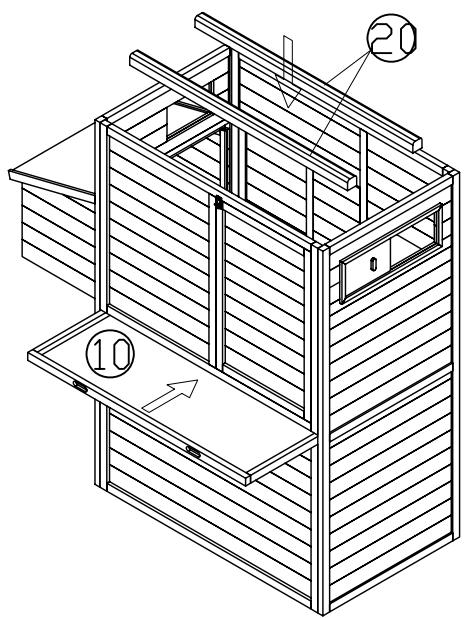


8

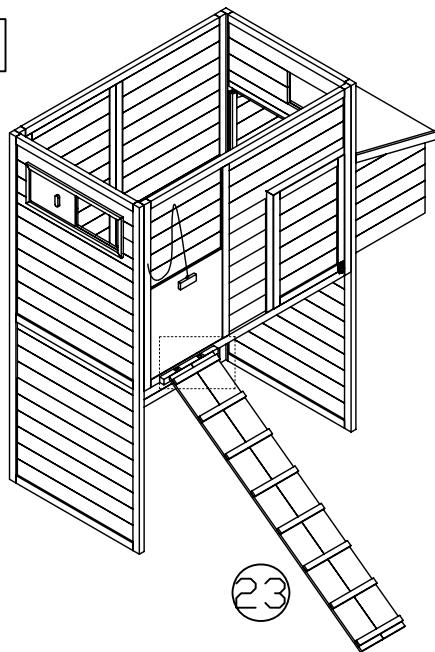


E X 2

9

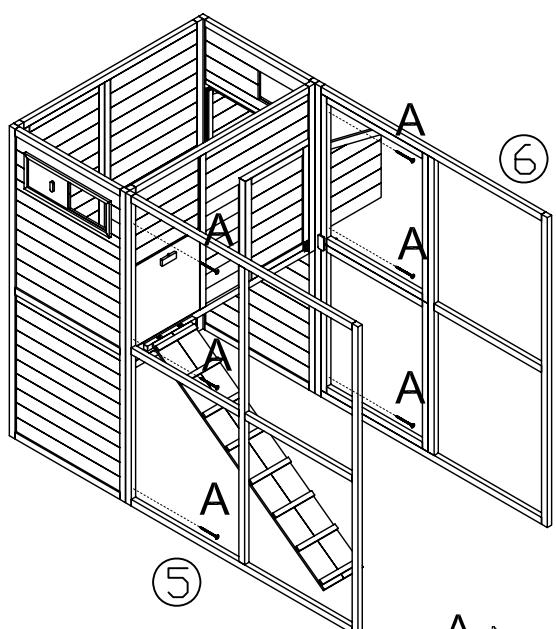

A X 6

10

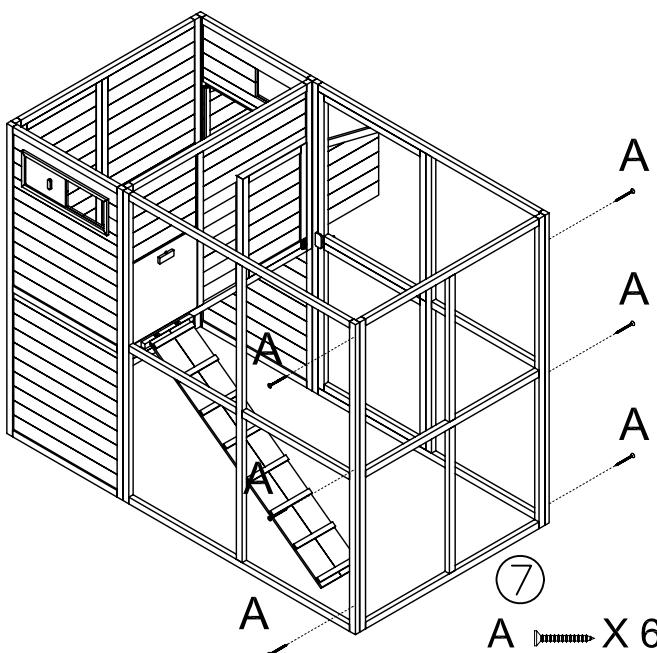

A X 6



**ADVANTEK**

Item #21933-The Town House

# Assembly Instruction




P3

11

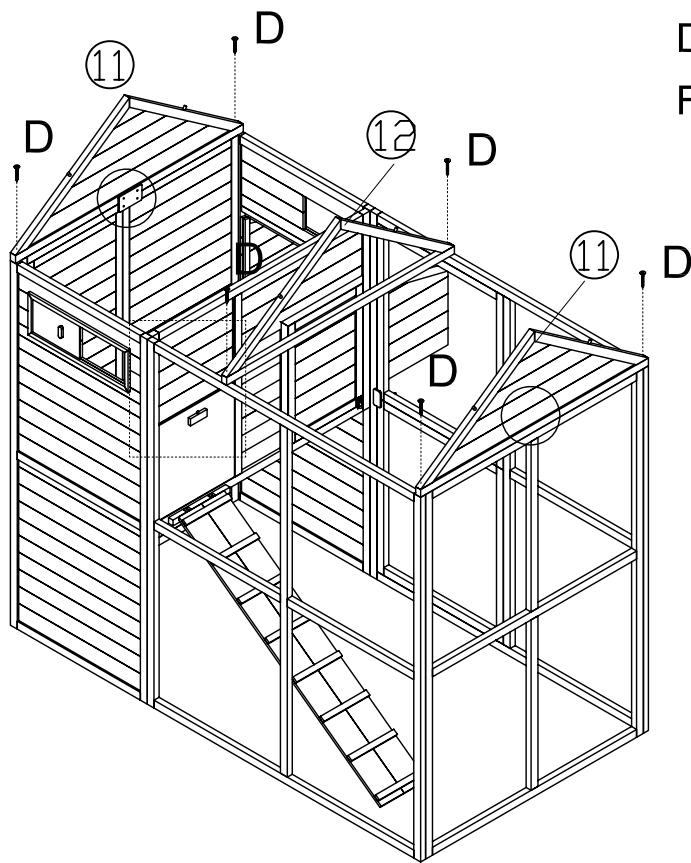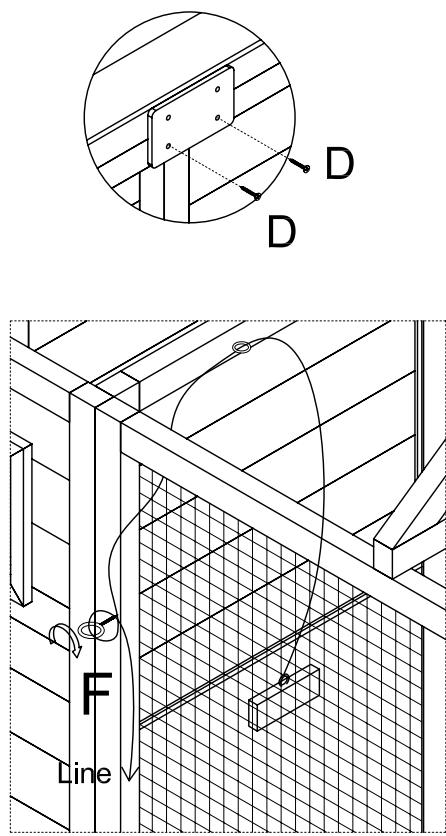

D — X 10  
F — X 1

12

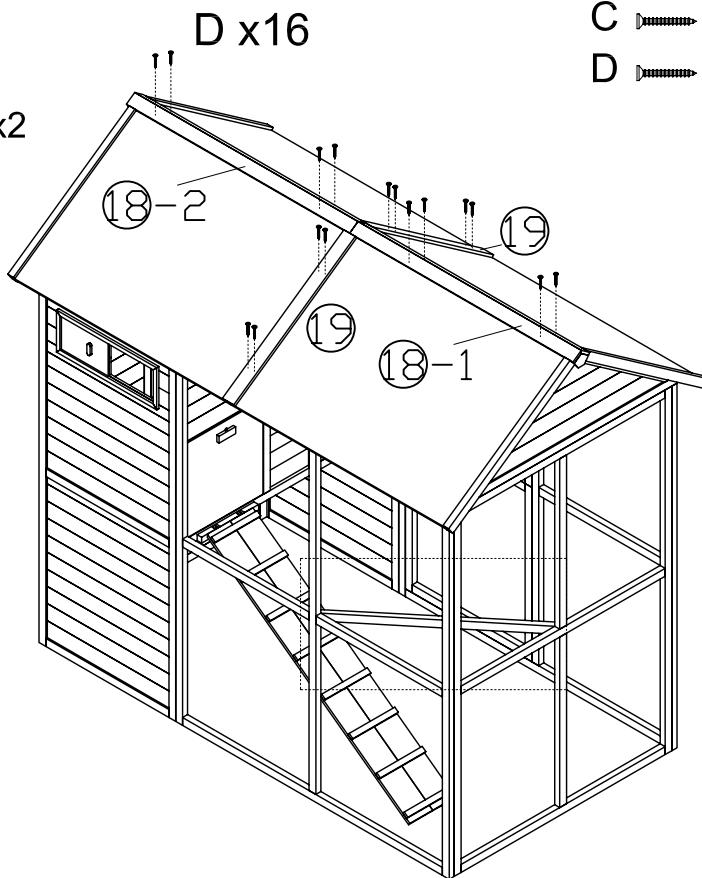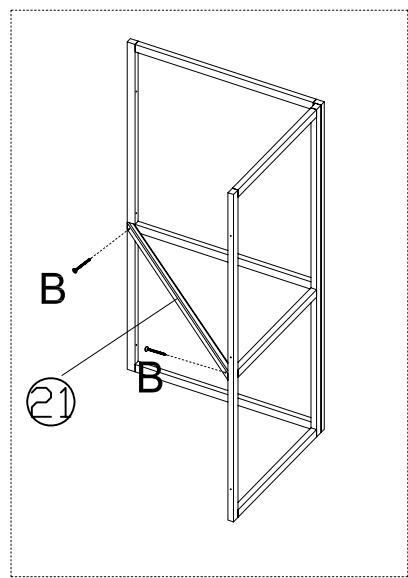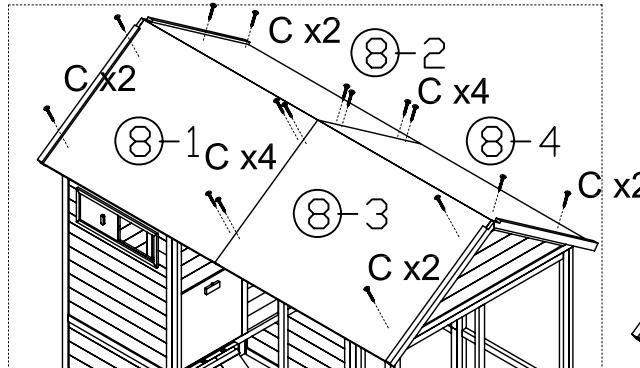

B — X 2  
C — X 16  
D — X 16